



PORTS  
1 2 3 4

PORTS  
5 6 7 8

PORTS  
9 10 11 12

PORTS  
13 14 15 16

PORTS  
17 THROUGH 32

Do NOT Insert Cable with Power ON  
Hinkspix PRO V1.9  
for use with  
Flex Expansion Boards

PASSED QC

Use A1 Micro-SD Card

PN 1925

RESET

1 Volt Line Out Audio

LONG RANGE OUTPUT 1

LONG RANGE OUTPUT 2

LONG RANGE OUTPUT 3

LONG RANGE OUTPUT 4

flex

REIS